




[CI CUSTOM INSTALLATION SERIES]

CI6.0 IX QM

OWNER'S MANUAL & INSTALL GUIDE

CI6.0 IX QM

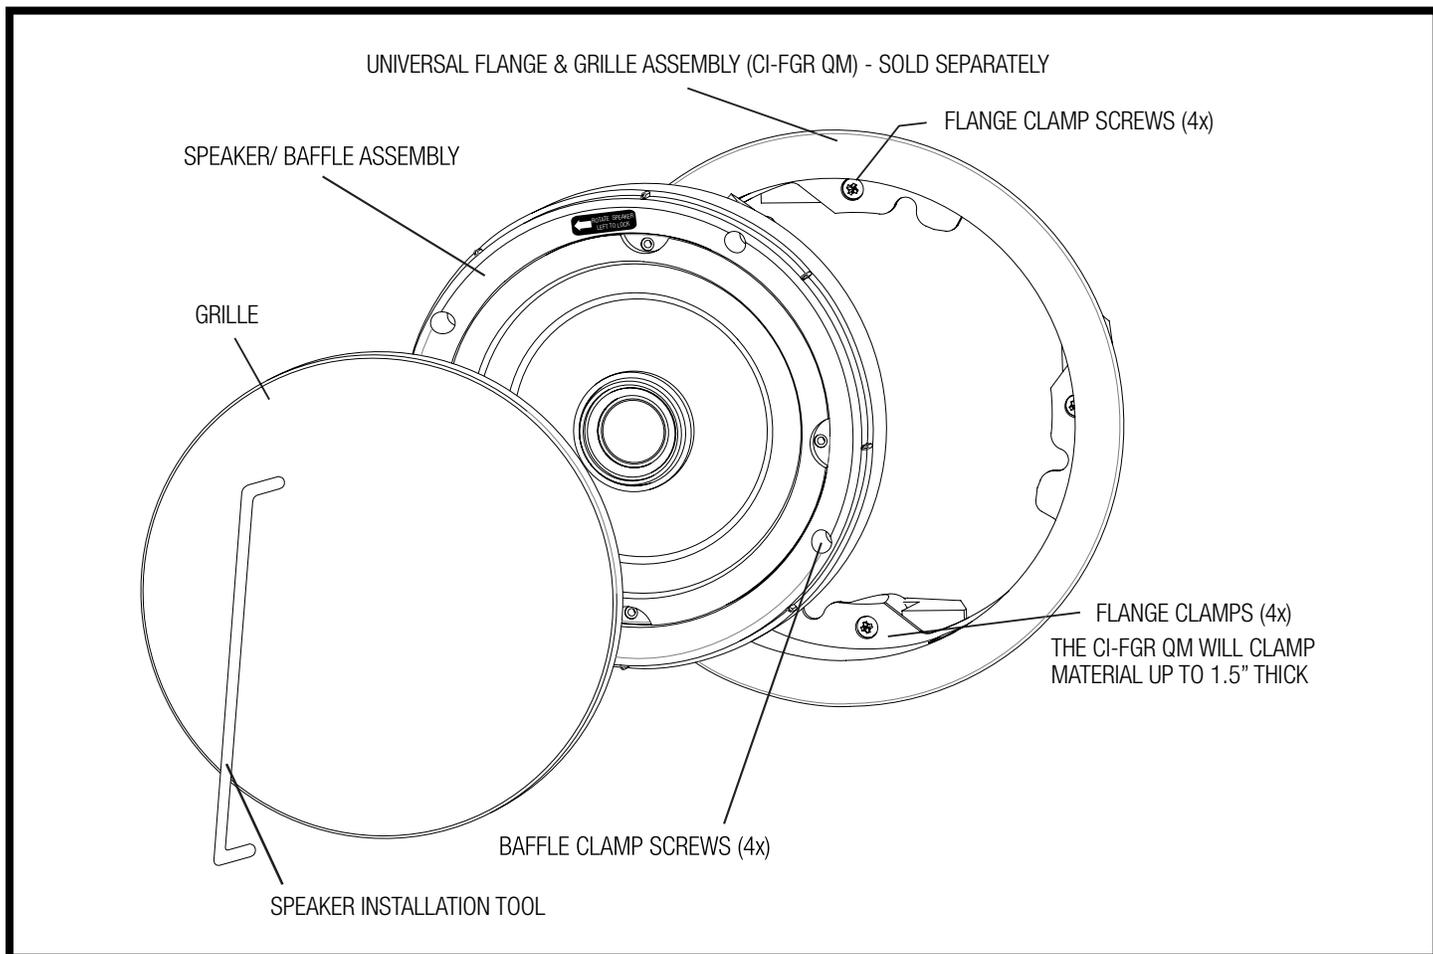

Thank you for purchasing Phase Technology[®] CI custom installation speakers. This tenth generation of high performance ceiling mounted speakers features the same superb sonic performance as our acclaimed PC Series cabinet speakers in addition to great flexibility and easy installation. This product incorporates Phase Technology's CI-FGR QM SAFETY-LOC[™] mounting system. This system of clamps engages and holds the speaker in the flange leaving your hands free to safely tighten the clamps with a screwdriver.

with set-up or operation, please contact one of our authorized dealers for assistance, or contact us directly.


Phase Technology Corporation
8005 W. 110th St., Suite 208
Overland Park, KS 66210
855.663.5600 (Domestic)
+1.913.663.5600 (International)
913.663.3200 (Fax)

All CI Series speakers include self-resetting solid-state PTC protection circuits. This unique system is able to detect when the speaker is being over-driven and lowers the speaker volume until the problem is corrected. The PTC device then resets itself for normal operation.

Regardless of application, serious audiophile listening or home theater, we recommend that you take the time to read this manual thoroughly before connecting speakers to your amplifier or receiver. In the highly unlikely event that you should experience a problem

SAFETY INSTRUCTIONS	3
INSTALLATION GUIDELINES	4
FLANGE INSTALLATION	4
SPEAKER INSTALLATION	4
NON-QM FLANGE INSTALLATION	4
CARING FOR YOUR SPEAKER	5
MAINTENANCE AND SERVICE	5
WARRANTY	5
SPECIFICATIONS	5

[SAFETY INSTRUCTIONS]

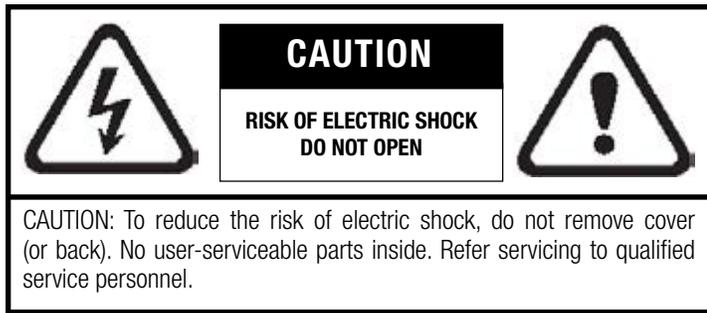

Explanation of Graphical Symbols



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions - The safety and operating instructions should be retained for future reference.

3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow Instructions - All operating and other instructions should be followed.

5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.

6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer.

PORTABLE CART WARNING



7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.

8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet

that may impede the flow of air through the ventilation openings.

9. Heat - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances that produce heat.

10. Power Source - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

11. Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed up or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

12. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.

13. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

14. Object and Liquid Entry - Care should be taken so that neither objects fall nor liquids spill into the inside of the appliance.

15. Damage Requiring Service - The application should be serviced by qualified service personnel when:

- the power supply cord or the plug has been damaged,
- objects have fallen onto or liquid has been spilled into the appliance,
- the appliance has been exposed to rain,
- the appliance does not appear to operate normally or exhibits a marked change in performance, or
- the appliance has been dropped or the cabinet damaged.


16. Servicing - The user should not attempt to service the appliance beyond those means described in the operating instructions. All other servicing should be referred to qualified service personnel.

17. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.

APPLICABLE FOR USA, CANADA OR WHERE APPROVED FOR USAGE

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, INSERT FULLY.

ATTENTION: POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRESE ET POUSSER JUSQU'AU FOND.

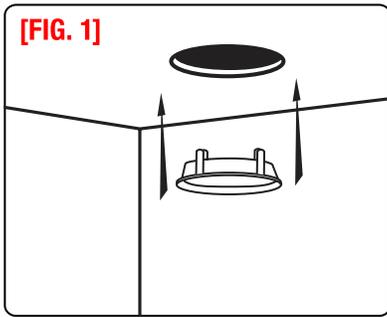

[FIG. 1]


[INSTALLATION GUIDELINES]

For proper connection and therefore full enjoyment of your new Phase Technology speakers, we encourage you to read this owners' manual thoroughly, even if you are very familiar with installing speakers. Speaker placement is very subjective. Placement follows the guidelines for the developers of in-ceiling speakers, yet is also guided by personal preferences. The proper spacing, location and adjustment of in-ceiling speakers are critical for complete enjoyment of your new speakers. This manual covers these topics thoroughly.

Choose the appropriate mounting location for each speaker.

NOTE: When deciding upon a location, consider the following:


- Be certain your speaker wires can be run to or are accessible from these locations.
- Make certain the wall or ceiling material is sturdy enough to support the weight and vibration of the speakers.
- Be certain the area behind the speaker is free of obstacles such as wall studs, electrical wiring, pipes, etc.
- Each speaker should be positioned properly, relative to the listening area for good coverage.
- Audio performance and room-to-room isolation will be improved if there is some fiberglass insulation placed loosely behind the speaker.

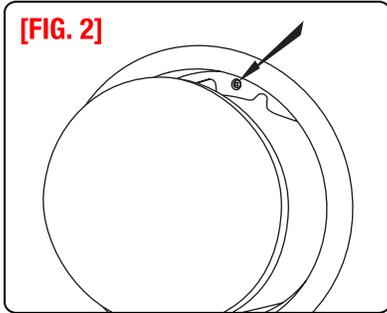

[FIG. 2]


[FLANGE INSTALLATION]

STEP 1: Using the supplied cutout template, carefully mark the area to be cut out. (Fig. 1) Using a drywall knife or saw, cut a hole in the drywall and prepare the speaker wires for connection to the speaker terminals. Remove the grille from the mounting flange by pressing it from behind. Insert the mounting flange into the hole.

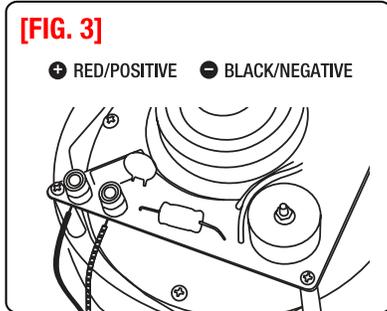

[FIG. 3]

STEP 2: Loosen the flange clamping screws one turn (counter clockwise) to release the clamp (Fig. 2). Next, tighten all four flange clamp screws evenly to secure the flange to the drywall. It is best to tighten each screw with the same amount of force (torque). **CAUTION: DO NOT OVER-TIGHTEN.**

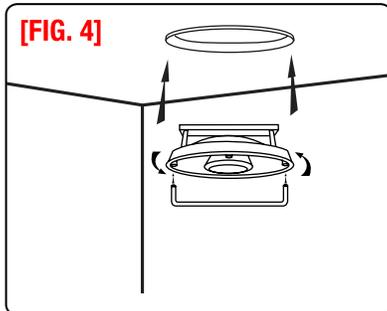


[FIG. 4]

[SPEAKER INSTALLATION]

STEP 3: Connect the speaker wires to the spring-loaded input terminals on the rear of the speaker, making sure no loose strands are exposed (Fig. 3).

STEP 4: Insert the speaker installation tool into two of the screw access holes on the speaker. Carefully place the speaker in the flange; rotate slightly until the speaker surface is even with or slightly recessed into the surface of the flange (Fig. 4). While exerting upward pressure, use the tool to rotate the speaker **COUNTER-CLOCKWISE** (left). This will engage the **QM SAFETY-LOC** clamps (Fig. 5) on the back of the flange. Remove tool and tighten the four clamp screws on the speaker. **CAUTION: DO NOT OVER-TIGHTEN.**

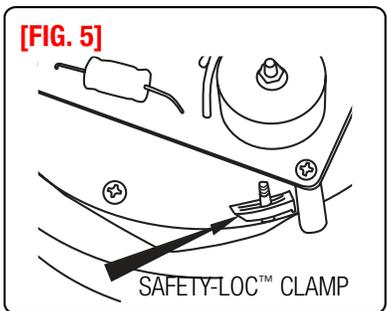


[FIG. 5]

CAUTION: DO NOT ATTEMPT TO ROTATE THE SPEAKER BY GRASPING THE TWEETER!

[NON-QM FLANGE INSTALLATION]

STEP 5: If you are installing the CI 6.0 IX QM with the QM clamps in a CI-FGR (non-QM flange), remove the QM clamp feet by unscrewing them from the speaker baffle (Fig. 6). Insert the speaker baffle into the flange and reuse the screws from the clamp feet to attach the speaker to the flange.

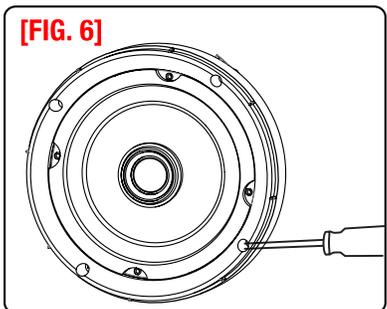

[FIG. 6]

STEP 6: The tweeter may be aimed toward the listening area by gently applying pressure to the inside of the outer edge of the tweeter assembly.

STEP 7: Carefully replace the grille by pressing it into the gap between the flange and the baffle. Enjoy!

[CARING FOR YOUR PHASE TECHNOLOGY SPEAKER]

All Phase Technology speakers are finished with a high degree of craftsmanship in either hand polished paint or vinyl laminates. We recommend using a lint-free rag with a small amount of glass cleaner to maintain the long-lasting beauty of the finish. Avoid products containing silicones, oils, oil derivatives, or solvents. Use a damp cloth on enclosures finished in vinyl laminates.

[MAINTENANCE AND SERVICE]

Because of Phase Technology's uncompromising quality control programs, it's unlikely that your speakers will ever need service if connected and used as outlined in this Owners' Manual. In the unlikely event that a problem does occur, please contact your Phase Technology dealer. Your dealer has the necessary factory-authorized parts and trained technicians to quickly restore your speaker to its original performance specifications.

[WARRANTY]

LIMITED WARRANTY: Phase Technology warrants its loudspeakers to be free from defects in material and workmanship for a period of ten (10) years for speaker product, limited lifetime for CI speakers, and three (3) years for the electronic components to the original purchaser. Purchase must be made from an authorized Phase Technology dealer.

This warranty does not cover service or parts to repair damage caused by misuse, abuse, damage while in transit, alterations, unauthorized repairs, failure to follow instructions, fire, flood or any other cause beyond the reasonable control of Phase Technology. Defects in speaker cabinets or grilles must be brought to the attention of your dealer immediately after purchase. This warranty will be void if the products' serial number has been altered or removed.

Should your Phase Technology product require service, please call the MSE Audio customer service department for a return authorization. All merchandise returned to Phase Technology without prior authorization will be refused. For your return authorization number, please call 855.663.5600 or email sales@mseaudio.com.

[SPECIFICATIONS]	CI6.0 IX QM	
TWEETER	1" Patented Pivoting Woven Synthetic Soft Dome	
WOOFER	6.5" Polypropylene w/ NBR Surround	
RMS	10 - 120 W	
FREQUENCY	55 Hz - 20 kHz	
SENSITIVITY	89 dB	
IMPEDANCE	8Ω	
CROSSOVER FREQ	700 Hz, 3.5 kHz	
DIMENSIONS	9.63" Diameter x 4.6" Depth	
CUTOUT DIMENSIONS	8.375" (CI-FGR QM)	
MOUNTING DEPTH	4"	
WEIGHT	2.75 lbs.	
GRILLE	Paintable White Powder-Coated Galvanized Steel	
ACCESSORIES	Metal Back Box (BB-12), Rough-In Bracket (RB-17), CI-FG/Micro, CI-FGR QM	

